
YAMAHA G14/16 UTILITY BOX INSTALLATION INSTRUCTIONS

DO NOT REMOVE TOP SUPPORTS (See Illustration A)

- 1) Remove access panel.
- 2) Remove four (4) bolts under body that hold the seat back supports.
- 3) Remove seat back/bag rack assembly.
- 4) Install mounting brackets using existing hardware under body. Use 8mm x 70 mm bolts in bag well. Secure foot brackets to slotted groove on mounting bracket using 8mm x 20mm bolts. Replace access panel. (See Illus. B)
- 5) Mount box, pull forward to alignment pins, center the box. From underneath, mark six (6) holes on box through mounting brackets.
- 6) Flip box over, drill 3/8" holes at each of the six marks. Use six low profile bolts to fasten box to mounting brackets. Washers on underside of frame.
- 7) Top Installation Kit uses OEM top struts. Cut Yamaha rear top support inside of the last 90-degree bend. Align top support with lip of box, drill two (2) 3/8" holes through each support and mount with 8mm x 45mm bolts.
- 8) Install chain using 6mm x 25mm bolts through holes in box by tailgate.



Illus. A

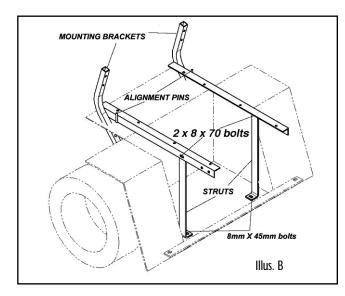



Illus. C



Illus. D